Water Wonders NSI Slate™

1-2-3 Installation Instructions

IMPORTANT – RETAIN FOR FUTURE REFERENCE – READ CAREFULLY

1. Please check the contents of the boxes before attempting to assemble this product. A full checklist of parts is in this instruction booklet. Check it very carefully. In the unlikely event that any components are damaged or missing, please contact our customer service hotline at **407-426-7674.**
2. **Assemble as near as possible to the point of use. Take extreme care when lifting to avoid personal injury or damage to the product.**
3. This product contains small items and plastic bags. Please be aware of the danger to young children.
4. A Pencil, Phillips Screwdriver, Level, and a Measuring Tape will be required for installation.

ASSEMBLY INSTRUCTIONS

635 W. Michigan Street Orlando, FL 32805 · PH 407-426-7674 · Fax 407-426-7721
www.bluworldusa.com · shop.bluworldusa.com

Parts

A. LED Light Bar

B. LED Remote Controller

C. Wire Clip

D. Pump

E. Header

F. Shroud

G. Rock Tray

H. Wall Bracket

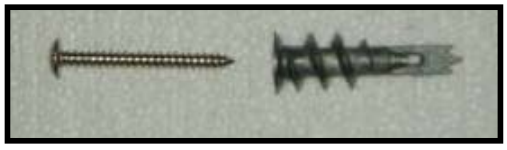

I.Tap Screws and EZ Anchors™

J.Rocks

NOTES ON POSITIONING YOUR FOUNTAIN

a. Try to position your fountain near an electrical outlet. The fountain should not be used outdoors with the transformer provided. Should you wish to use outdoors a pump with an outdoor rated transformer or A/C pump rated for outdoor use will be needed.

b. When considering the location of your fountain, please consider making it easily accessible for maintenance (e.g. adding water, cleaning etc.)

c. Consider the surface on which your waterfall will be placed. This feature can be mounted on sheetrock with wood studs, metal studs, and can be mounted on tile or concrete. Due to the light weight nature of this fountain, it is not necessary to mount into studs but you MUST use EZ Anchors™ for any screw that does not hit a stud.

d. Mount indoors only. It is not recommended to place Powder Coat models in direct sunlight.

e. ** It is critical that your waterfall is level as this will ensure even water flow. **

Section 1 - Initial Prepping

Step 1.1 Remove Water Wonders NSI Slate™ from its shipping carton.

Step 1.2 Tools required: Level, Pencil, Phillips Screwdriver, Measuring Tape as shown in Fig1.2 as below.

Step 1.3 Decide where you would like to install your fountain.

It is critical that your waterfall is level as this will ensure even water flow.

a. Because of the relatively light weight nature of your new fountain, it is not necessary to mount it directly into wall studs.
b. Mount indoors only and in a place that is not in direct sunlight.
c. We recommend you install your waterfall above an electrical outlet. A Ground Fault Interrupt (GFI) outlet with an internal circuit breaker is preferred.

Fig 1.2

Section 2 – Mounting the Wall Bracket

Step 2.1 Locate your level, Measuring Tape, and Screwdriver. Draw a line on the wall indicating the top of where you would like to mount your waterfall. See Fig 2.1.

Fig 2.1

Step 2.2 Using your measuring tape, measure from the top of your fountain down to the center of your wall bracket and record your measurement.

Step 2.3 Using the measurements obtained in Step 2.2, measuring down from the line drawn in Step 2.1, draw vertical line on the wall to indicate the location of the wall bracket sitting position (See Fig 2.3.a). Using a level, hold the Wall Bracket (H) to the wall with the top angled towards you. Mark both mounting holes on the wall. Remember to double-check your measurements. See Fig 2.3.b & 2.3.d. Locate EZ Anchors™ (I). The number of EZ Anchors™ must match the number of holes located on the Mounting Bracket.

Fig 2.3.a

Fig 2.3.b

Fig 2.4.d

Step 2.4 To install the EZ Anchors™ (I), gently tap or press the tip into the drywall and slowly screw the anchors into the wall (See Fig 2.4.a). Make sure the flat side of the anchor is flush with the wall. Do not over-tighten the anchors as this will render them ineffective, as well as damage the drywall. If you encounter a wall stud while installing an EZ Anchor™ (I), use the 1” mounting screw without the anchor. See Fig 2.4.b. We only suggest using the provided EZ Anchors™ (I) since each EZ Anchor™ (I) has a weight capacity of up to 50 pound. Plastic anchors are not an acceptable substitute. A correctly installed wall bracket is illustrated in Fig 2.4.c.

Fig 2.4.a

Fig 2.4.b

Fig 2.4.c

Section 3 – Installing the Waterfall

Step 3.1 Locate the Header (E) and Shroud (F). Install the Header (E) by simply sliding into the support rails located behind the fountain as shown in Figures 3.1.a & 3.1.b. Install the Shroud (F) by carefully sliding it behind the panel and down onto the reservoir as shown in Figures 3.1.c and 3.1.d. Install the Header (E) by simply sliding it into the support.

Fig3.1.a

Fig 3.1.b

Fig 3.1.c

Fig 3.1.d

Step 3.2 To install the LED Light Bar (A), simply place it into the top of the Header (E) as shown in Figure 3.2.

Step 3.3 Unwind the cord and run it down the back of the fountain. Place the second Wire Clip (C) and stick to the side of the bracket located on your water feature and clip the Power Cord wire as noted in Figure 3.3.a and 3.3.b.

Fig 3.2

Fig 3.3.a

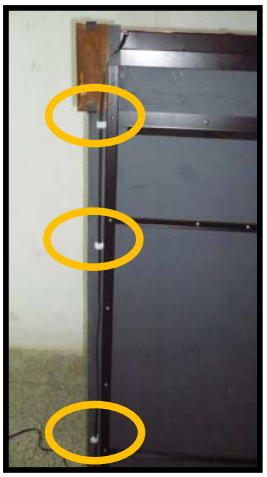

Fig 3.3.b

Step 3.4 After completely unwinding the cord on the LED Light Bar (A) and Pump (D) power cords, lift your waterfall into place and engage the brackets by lowering it onto the Wall Bracket (H) as shown in Fig 3.4. After mounting your fountain to the wall, fill the reservoir with water (distilled water is strongly recommended).

Step 3.5 The water level must be maintained at least 1/2” above the pump.

If the water level drops below the pump, damage may occur.

Fig 3.4

Section 4 – Operating the Waterfall

Step 4.1 After filling the fountain with water, plug the LED Light Bar (A) pump into the wall. As water begins to flow down the surface, guide the water with your hand or use a non-abrasive sponge until the water flows evenly over the entire waterfall surface. It may take a few minutes for the water to cover the entire waterfall surface.

Step 4.2 Install Rock Tray (G) and spread Rocks (J) as shown in Figures 4.2.a - 4.2.b.

Fig 4.2.a

Fig 4.2.b

RF Wireless Touching LED Remote Controller

(Brightness Adjusting)

1. **Technical Parameters (remote control):**
   a. Power supply: AAA battery*3pcs
   b. Cover material: ABS
   c. Fabrication processing: multicolor printing & UV varnish
2. **Technical Parameters (controller):**
   a. Working voltage: DC 12V/24V
   b. Output control: 1circuit
   c. 6A/circuit
   d. Dimension: L85*W64*H24
   e. Receiving range: 20meters
3. **Functions of Keys**
   a. Key 1: on
   b. Key 2: off
   c. Key 3: highest brightness
   d. Key 4: medium brightness
   e. Key 5: lowest brightness

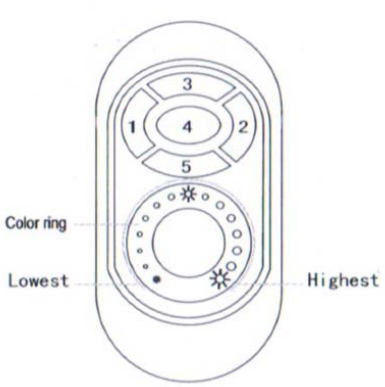

4. **How to use**
   a. Use your finger to touch the color ring. You can change the brightness from the highest to the lowest (100%-1%, 50 grades to adjust).
   b. Resume function. The previous settings will be resumed while power on again.
   c. Matching code
      Press Key 3 once within 3 seconds when power on again, the light will blink 3 times if matching is successful.
      Press Key 3 five times within 3 seconds when power on again, the light will blink 6 times if clearing is successful.
5. **Caution**
   Please don't touch or press the color ring while loading the batteries to protect the sensitiveness. Please use the remote controller 3 seconds after the batteries are loaded. Please reload the batteries when you find the color ring is not sensitive.
6. **Connecting chart:**

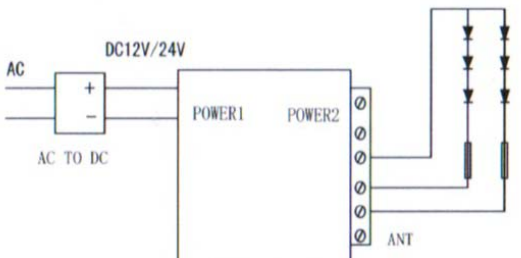

Warranty

Bluworld product is warranted against defects that render it unfit for its reasonably intended use. This Warranty is not extended to cover use of the product for a purpose other than as intended, and if the product is used unreasonably, or for purposes other than as intended, or if it is altered, modified or repaired by a party other than Bluworld, then the Warranty shall be null and void. The Warranty is in effect for a period of six months beginning from the date of sale to the original retail purchaser and the rights under this Warranty are limited to the original retail purchaser. Bluworld will, upon written notification thereof, take commercially reasonable steps to correct such defects (see “manufacturers defects below”), at Bluworld’s sole option, by suitable repair, replacement, or refund. Bluworld will not be responsible for the installation, labor or any other costs or expenses related to the re-installation of a warranted part, and such expenses are not covered by this warranty. THIS LIMITED WARRANTY IS EXCLUSIVE AND IN LIEU OF ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNES FOR A PARTICULAR PURPOSE, OR OTHER WARRANTY OF QUALITY, WHETHER EXPRESS OR IMPLIED, EXCEPT FOR THE WARRANTY OF TITLE AGAINST PATENT INFRINGEMENT. Corrections of nonconformities, in the manner and for the period of time provided above, shall constitute fulfillment of all liabilities of Bluworld to any Dealer with respect to the goods, whether based on contract, negligence, and strict tort or otherwise. Bluworld contract sales personnel, including but not limited to authorized Dealers and Resellers (collectively, "Sales Personnel"), are not authorized to make warranties about Bluworld merchandise. ORAL STATEMENTS DO NOT CONSTITUTE WARRANTIES. Oral statements made by Bluworld employees or other Sales Personnel shall not be relied upon by a Dealer and shall not become part of any contract for sale. The entire sales contract between a Dealer and Bluworld will be set forth in the invoice and/or accompanying or reference documents provided by Bluworld to the Dealer or Sales Personnel. No other warranties are given beyond those set forth in those documents. Please be aware that you may have valuable rights under the state law in which you reside. Some of the provisions of this Warranty may be prohibited by your state law in which case your state law will govern and control. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Our products are warranted for a period of six months against defects in finish, pumps and other product performance issues. Light bulbs are not warranted. Our experience has shown that in practically 100% of incidents that any defect is apparent within a week of installation and use. Appearance defects should be noticed upon unpacking the fountain. We have found that finishes have ‘failed’ due to poor maintenance, local water conditions with minerals affecting the finish, attempts to clean with harsh chemicals or abrasive pads being used. Performance of water flow, spitting, and other ‘leaks’, are usually caused by debris getting into the fountain, buildup of minerals, algae from poor water or lack of maintenance. Pumps can also fail due to water levels not being maintained in the reservoir and this is not covered by the warranty.

Manufacturers Defect defined - A distinct and obvious flaw in the manufacturing of the product that inhibits the product’s ability to function properly or a distinct and obvious flaw in the workmanship of the product that affects its physical appearance. Bluworld water features are manufactured under generally accepted manufacturing techniques as recognized by the International Organization of Standardization. Our products are hand made and hand finished thus minor scratches in materials within accepted ranges are not considered defects.

Slate- Many of our products contain natural slate. Slate can vary to a large degree and that individuality is what is considered to be unique and inherent to the beauty of the natural product as no two are exactly alike. Photos in our marketing materials are representative of our slate products but should not be relied on to duplicate the photo. We use natural mined slate in our products. Personal taste in the appearance of slate is not considered a reason for a return.